

Sustainable
LUMBER CO.

www.sustainablelumberco.com

(406) 642-7120

Pre-fab Wood Wall Panel Installation Guide

STEP #1:

START BY CUTTING OFF
THE RIGHT SIDE OF THE PANEL
MAKING A SQUARE EDGE



STEP #2:


BUTT THE PANEL INTO THE
BOTTOM RIGHT CORNER




STEP #3:




STEP # 4: (repeat to end of wall)

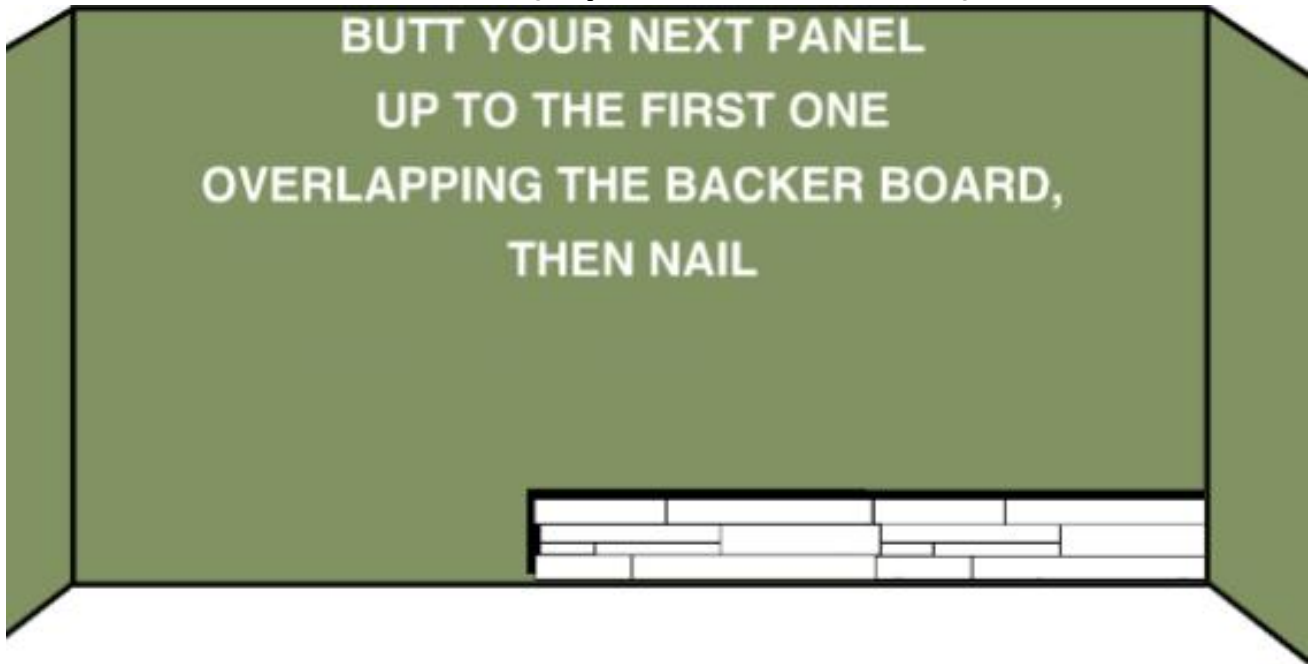

STEP # 5:

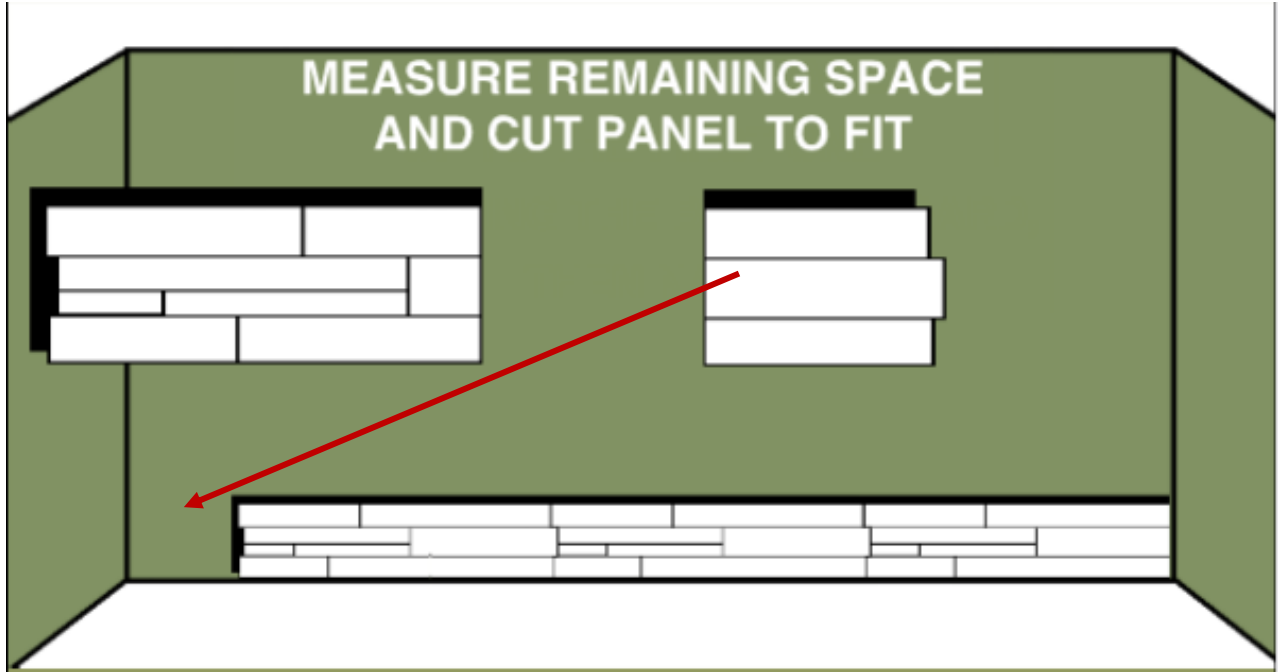

STEP # 6:

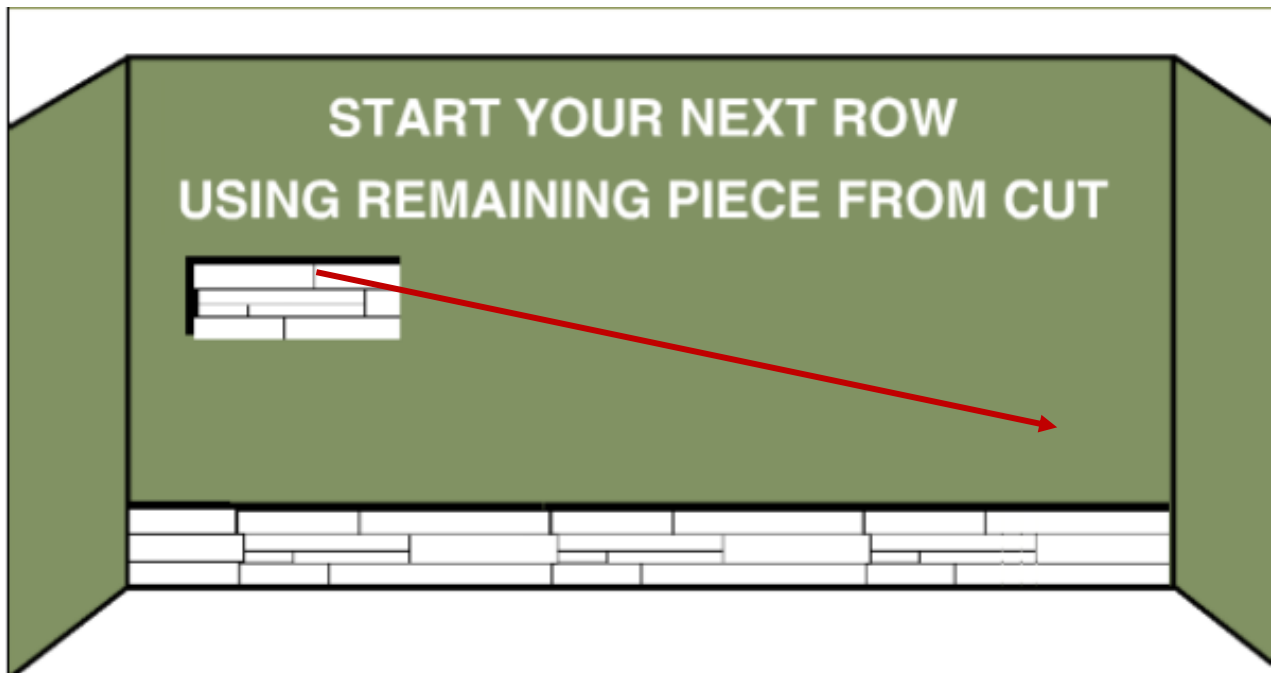

REPEAT STEPS UNTIL WALL IS COMPLETE